

# Cleaning the Forsta Screen

**WARNING!:** Please use Eye protection and other personnel protection aids as specified by MSDS sheets for chemicals.

1. Remove Screen from housing.

2. Clean Inside of screen with wire brush.



3. Add 1 liter of Muriatic Acid to clean bucket.




4. Carefully add 3 liters of clean water to same bucket.



5. Lower screen into bucket and allow to sit for 30 minutes (minimum).

6. If screen was not fully submerged, flip screen and repeat soaking time.

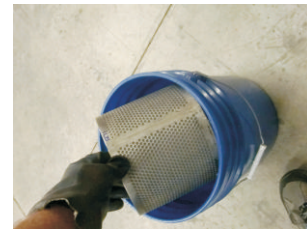

7. Remove screen from chemicals and rinse off with fresh clean water.

8. Hold screen up to light and verify that screen is clean and can be easily seen through. The holes in the screen should be 90 -100% free of buildup.



Repeat cleaning as required to achieve, clean screen.

9. Install screen back into filter housing.

After cleaning, verify filter operation as shown in the manual.